


At a glance Kiox 300 & LED Remote



BOSCH
Invented for life

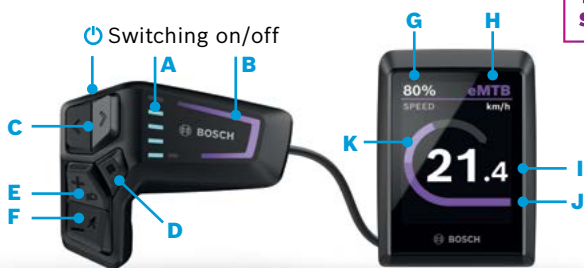

The smart
system

- A** LEDs: Battery charge level
- B** Riding mode LED: Support level
- C** Arrow buttons: Toggle between screens & settings
- D** Selection key: Confirm/switch to 2nd level
- E** Plus/Light button: Increase support level/switch light on & off (3 sec. press)
- F** Minus/walk assistance button: Reduce support level/walk assistance (hold down & move eBike after one sec)
- G** Battery charge level
- H** Riding mode
- I** Current speed
- J** Motor performance
- K** Rider performance

Use **+** / **-** buttons to select one of four assisted riding modes.

- Eco** Efficient support for maximum range
- Tour** Consistent support for longer rides
- Tour+*** Continuous support for energy-saving rides
- Sport** Powerful support for all types of riding
- eMTB**** Dynamic support for a natural feel
- Turbo** Maximum support for challenging rides

*Contact your local dealer to find out whether your eBike can be updated with Tour+ mode. **The eMTB mode replaces the Sport mode on eBikes with the Performance Line and the Performance Line CX drive units.

The eBike Flow app: Enhance your riding experience with the smart system



The eBike Flow app gives users of compatible smartphones access to numerous features, integrates personal favorite apps such as Apple Health, and automatically synchronizes activity data. Simply connect the smartphone to the eBike via the LED remote using Bluetooth.