## At a glance LED Remote





- A Charge level LEDs: Display of the current battery charge level
- B Riding mode LED: The color shows the current support level
- C Left/right button: Decrease/ increase brightness
- D Selection key
- E Plus/Light button: Increase support level/switch light on & off (3 sec. press)
- F Minus/walk assistance button: Reduce support level/activate walk assistance by holding down & moving the eBike after one second

Use  $\bigcirc$  /  $\bigcirc$  buttons to select one of four assisted riding modes.

Eco	Efficient support for maximum range
Tour	Consistent support for longer rides
Tour+*	Continuous support for energy-saving rides
Sport	Powerful support for all types of riding
eMTB**	Dynamic support for a natural feel
Turbo	Maximum support for challenging rides

\*Contact your local dealer to find out whether your eBike can be updated with Tour+ mode. \*\*The eMTB mode replaces the Sport mode on eBikes with the Performance Line and the Performance Line CX drive units.

## The eBike Flow app: Enhance your riding experience with the smart system



The eBike Flow app gives users of compatible smartphones access to numerous features, integrates personal favorite apps such as Apple Health, and automatically synchronizes activity data. Simply connect the smartphone to the eBike via the LED remote using Bluetooth.